 
 




Featuring two powerful spot light modes plus a broad area light mode, the *Energizer*® Expert LED Lantern projects up to 500 meters, making it an ideal light for a wide range of industrial applications. The head pivots 140° and allows users to direct the light precisely where needed. It is easy to operate, with a push button switch and a detachable carrying strap. With energy-efficient LED technology and multiple beam distance settings, the Expert LED Lantern combines an extraordinary brightness and long lasting runtime that can be optimized for a variety of needs.

Lumens	Runtime	Beam Distance	Drop	Water Ingress
				



BATTERY SPECIFICATIONS			
Battery Type	Energizer		
Battery Size	6V		
Number of Cells	1		
BATTERY PERFORMANCE			
Modes	Lumens (lm)	Runtime (h)	Beam Distance (m)
High	500	40	-
Medium	400	50	-
Low	150	120	-
Modes			
High, Medium, Low			

DESIGN BENEFITS
✓ Rugged, alloy construction
✓ Designed to Last up to 15 years
✓ Head swivels 140° to direct light where you need it
✓ Easy-to-use push button switch
✓ Shatterproof lens

PERFORMANCE BENEFITS
✓ Up to 10X Brighter than standard LED technology
✓ Extended run time
✓ High intensity beam
✓ Three operating modes

LIGHT AND POWER SOURCE
✓ Features LED Technology
✓ Operates on 6V Battery included

PRODUCT SPECIFICATIONS
Weight: 689 Grams / 24.3 Ounces
Dimensions: 152 mm x 216 mm 6" x 8.5"

ELECTRICAL CHARACTERISTICS
Nominal Power Consumption: xx W
Batteries: Energizer 6V dc
LED Specifications: LED 6V cc / xxx mA

DISCLAIMERS
Tested according to ANSI FL1 Standards.
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1)
This device may not cause harmful interference, and (2) this
device must accept any interference received, including
interference that may cause undesired operation.
CAUTION. Do not stare at exposed lamp in operation. May
be harmful to the eyes.

CERTIFICATES AND COMPLIANCE
EMC, EN62471, FCC
  

Publish Date: 08-06-2022

OPERATING INSTRUCTIONS

1. Press on/off button to turn on.
2. Press 1 time for high.
3. Press 2 times for medium.
4. Press 3 times for low.
5. Press again for off.

BATTERY CHANGING INSTRUCTIONS

1. Unscrew knobs to release battery.
2. Align with new battery and tighten the knobs.